


Installation "My Speedo"

This is the schema:

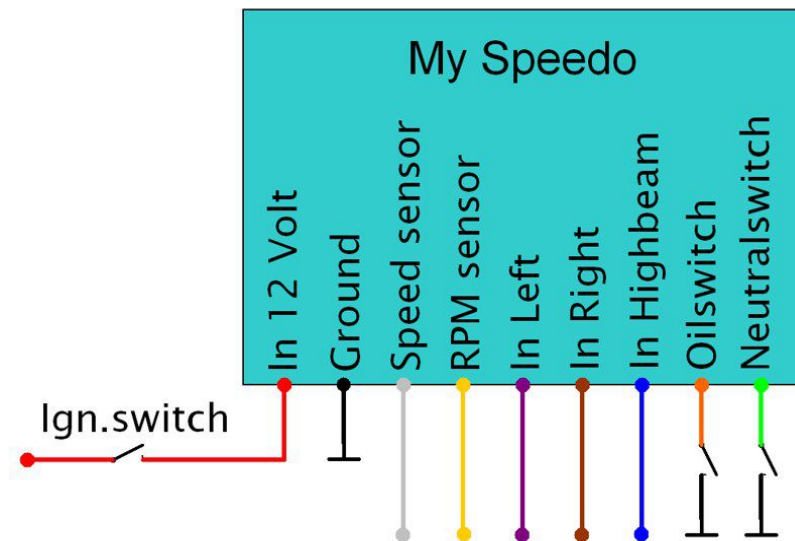

The connections are indicated like in the range of the original board.

+ 12V Input: Switched 12 Volt after ignition switch.

Gnd: Connection to ground or minus battery.

Speed signal: Connection to the speed sensor. You can change the polarity in the "Config" menu on the lcd.

RPM sensor: Connection to the ignition module. You can change the polarity in the "Config" menu on the lcd as well.

In Left: Cable to the left indicators

In Right: ...Yes, right :-)

In Highbeam: This is the input to the high beam bulb.

Oilswitch: This wire goes to the oil switch.

Neutralswitch: This cable is wired to the neutral switch.

Please check your local regulations regarding the traffic light rules in your country before wiring of the My Speedo. Please be aware that we are not responsible for any hazards, damages or disadvantages due to the use of the device. The device is registered under the number DE54933725 WEEE as B2C device. We also declare that the My Speedo is conform to the CE and ROHS regulations for the European market. We tried to keep this manual as simple as possible. If you have any questions during the installation please don't hesitate to contact us at info@elektronikbox.de

We wish you a lot of fun with your new My Speedo and of course always a safe trip!